 


PowerShot G2 System Map

DIGITAL CAMERA

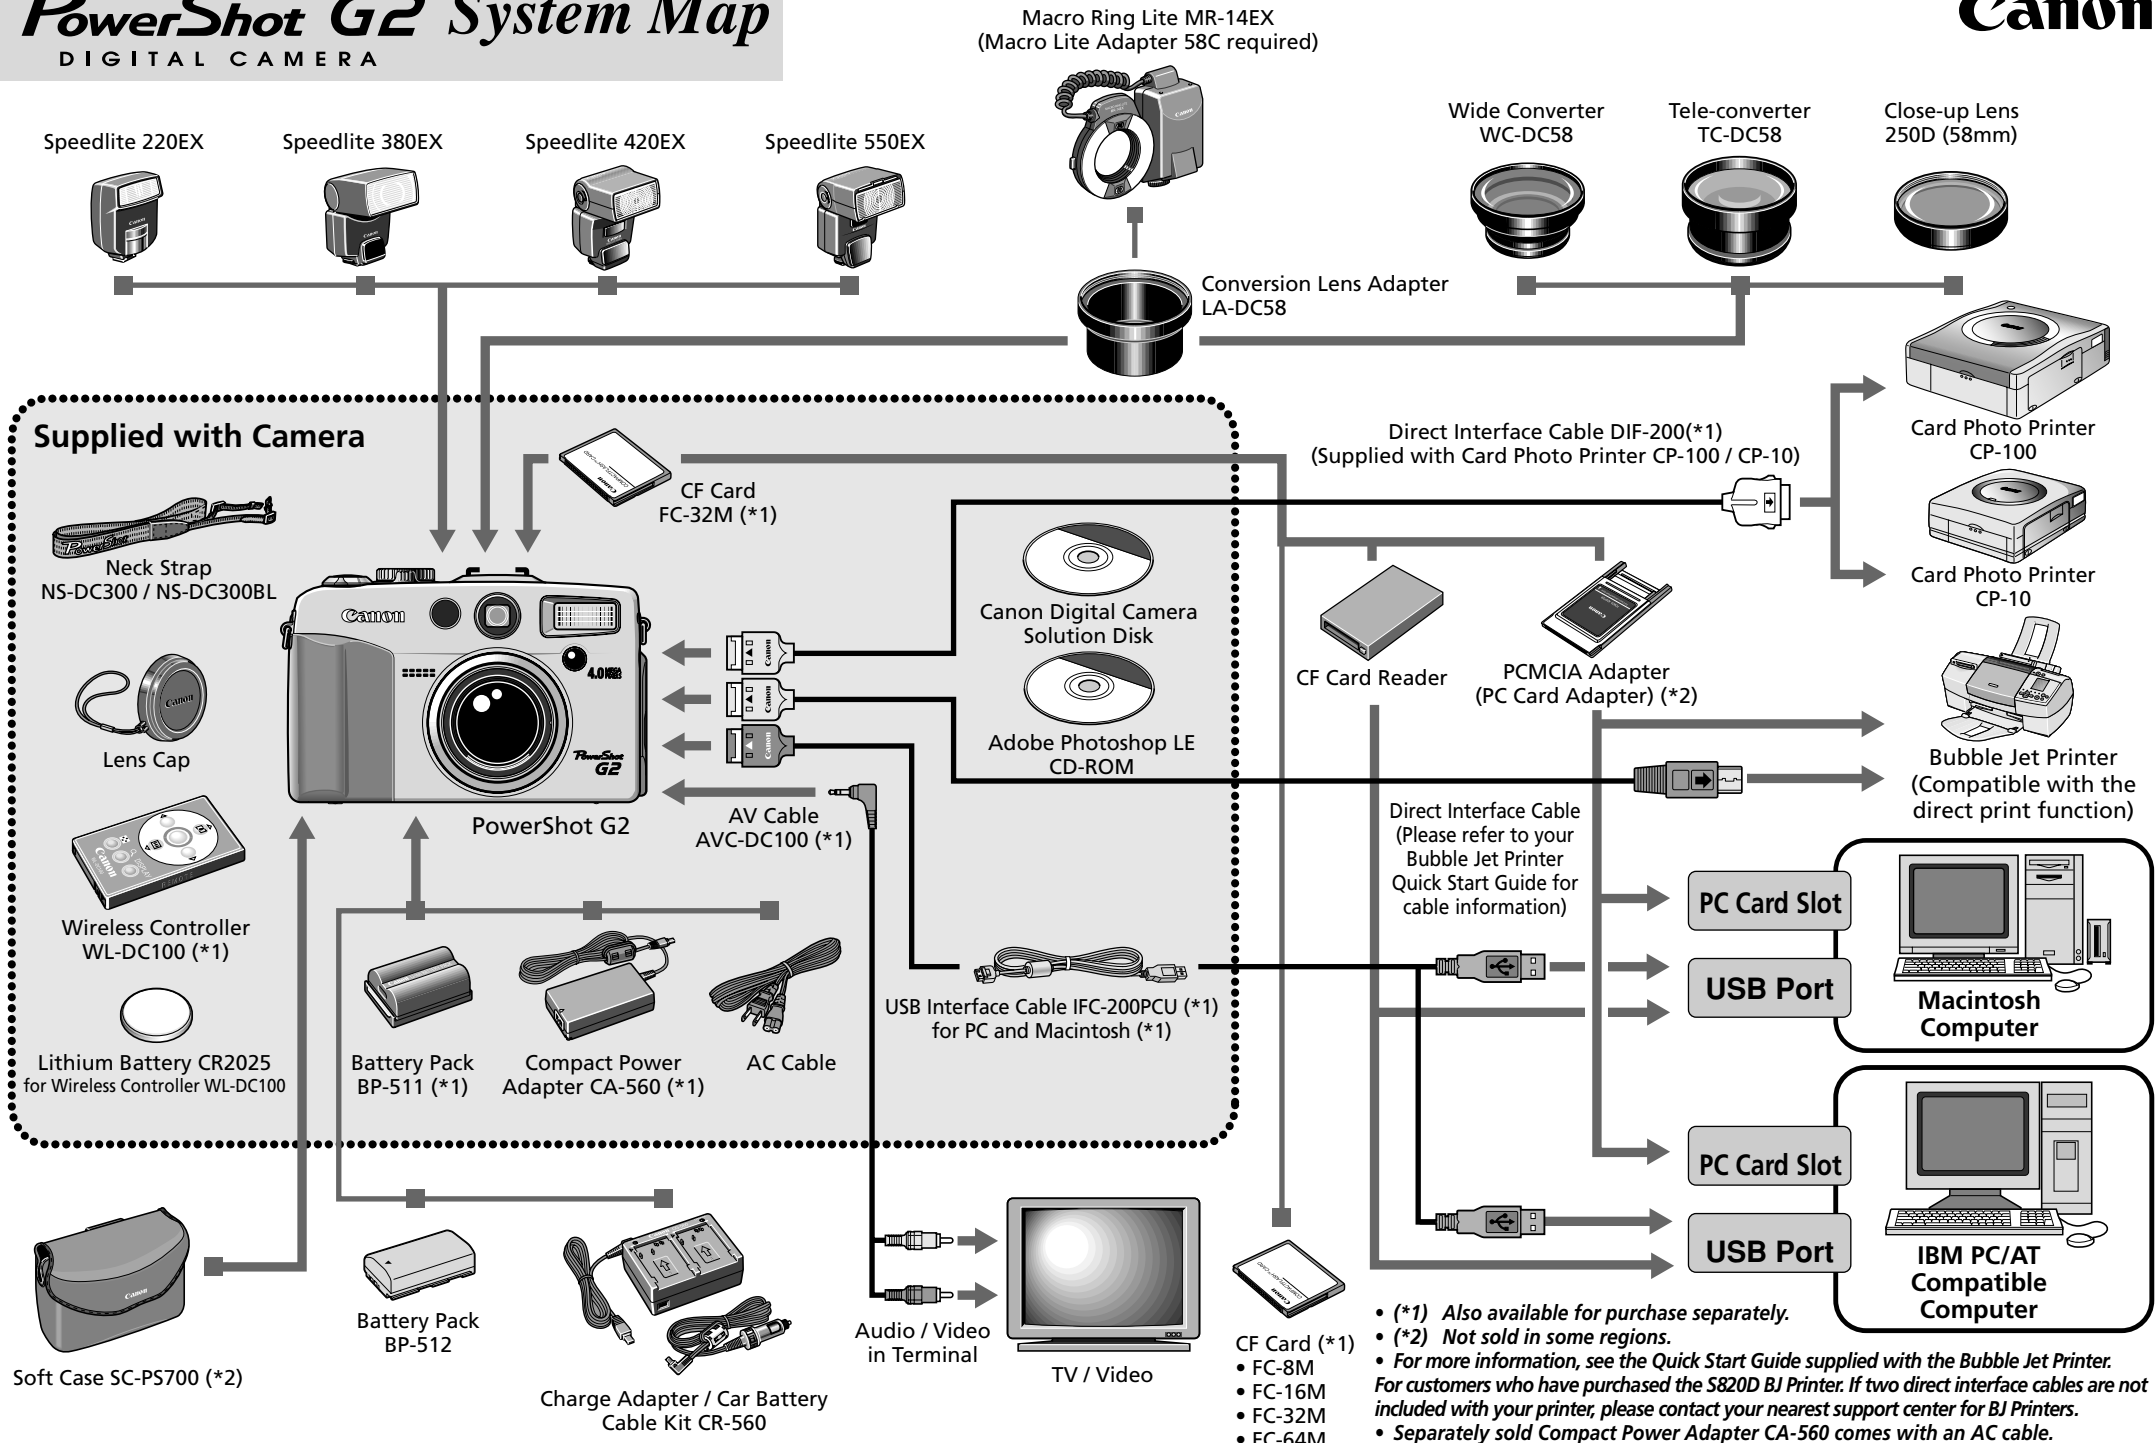

- CF Card (*1)
- FC-8M
 - FC-16M
 - FC-32M
 - FC-64M
 - FC-128M

• (*1) Also available for purchase separately.
 • (*2) Not sold in some regions.
 • For more information, see the Quick Start Guide supplied with the Bubble Jet Printer.
 • For customers who have purchased the S820D BJ Printer. If two direct interface cables are not included with your printer, please contact your nearest support center for BJ Printers.
 • Separately sold Compact Power Adapter CA-560 comes with an AC cable.

Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Lens Cap
- Neck Strap NS-DC300 or NS-DC300BL
- Compact Power Adapter CA-560
- AC Cable (for CA-560)
- Battery Pack BP-511
- Terminal Cover (for Battery Pack BP-511)
- CompactFlash™ Card FC-32M
- Case for CompactFlash Card
- AV Cable AVC-DC100
- USB Interface Cable IFC-200PCU
- Wireless Controller WL-DC100
- Lithium Battery CR2025 (for Wireless Controller WL-DC100)
- Canon Digital Camera Solution CD-ROM
- Adobe Photoshop® LE CD-ROM
- Camera User Guide
- Software Starter Guide
- System Map (this publication)
- Canon Customer Support Leaflet
- Warranty Card*

*Not included in some regions.

Optional Accessories

The following optional accessories are available.
Some accessories are not sold in some regions.

Lens


- **Wide Converter WC-DC58**
Converts the focal distance of the body lens by a factor of 0.8 when attached.
- **Tele-converter TC-DC58**
Converts the focal distance of the body lens by a factor of 1.5 when attached.
- **Close-up Lens 250D (58mm)**
A lens for shooting at higher magnifications when the camera's macro mode is used.
- **Conversion Lens Adapter LA-DC58**
Adapter for fitting the wide converter, tele-converter, close-up lens and Macro Ring Lite MR-14EX to the camera.

Power Supplies

- **Compact Power Adapter CA-560**
An adapter for charging Battery Pack BP-511 within the digital camera and for powering the digital camera from a household power source.

Please check the cable of the CA-560 you purchased. A ferrite core should be located near the plug on the camera end of the cable. If there is no ferrite core, please contact your retailer.

Ferrite core

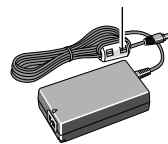

- **Battery Pack BP-511**
- **Battery Pack BP-512**
Rechargeable lithium ion battery.
- **Charge Adapter/Car Battery Cable Kit CR-560**
Draws from a car battery to charge Battery Pack BP-511, or supplies power to operate the camera. In addition, battery packs can be charged using a household power source if Compact Power Adapter CA-560 is used.

Flash

- **EX-Series Speedlites**
Speedlites for Canon EOS models. Subjects are optimally illuminated for crisp, natural images.
 - Speedlite 220EX
 - Speedlite 380EX
 - Speedlite 420EX
 - Speedlite 550EX
- **Macro Ring Lite MR-14EX**
In addition to its use in FE lock photography, it can be used for various macro flash photography purposes. The Macro Lite Adapter 58C (sold separately) and Conversion Lens Adapter LA-DC58 (sold separately) are required to mount it on a PowerShot G2.

Computer Connection Accessories

- **USB Interface Cable IFC-200PCU**
A cable used to connect the camera to the computer.
 - With Windows, the USB interface can only be used on systems that come preinstalled with Windows 98, Millennium Edition (Me) or 2000. With a Macintosh computer, the USB interface can only be used on models with genuine Apple-brand USB interfaces.

- **PCMCIA Adapter (PC Card Adapter)**
An adapter to fit a CF card so that it can be used in a PC card slot in a computer.

Others

- **CF Cards**
CompactFlash™ (CF) cards are used to store images recorded by the camera. Canon brand cards are available in 8 MB, 16 MB, 32 MB, 64 MB, and 128 MB capacities.
- **AV Cable AVC-DC100**
A cable used to connect the camera to a TV or video player.
- **Wireless Controller WL-DC100**
Operates camera from a distance.
- **Soft Case SC-PS700**
Protect the camera from scratches and dirt. Carries the camera, battery pack, CF card and wireless controller.

Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily with these super-compact, light-weight printers with the direct print function by connecting them to the camera with a single cable and operating the camera's controls.

Some accessories are not sold in some regions.

Card Photo Printer CP-100

Prints high-quality L size, Postcard Size and Card Size images. Canon's separately sold rechargeable batteries for the CP-100 make the printer portable, even allowing you to print your images outdoors.

- **Color Ink / Paper Set KP-36IP, KL-36IP, KC-36IP**
- **Color Ink / Label Set KC-18IL**
- **Color Ink / Full-Sized Label Set KC-18IF**
Color ink and paper sets for the CP-100.
- **Paper Cassette PCL-CP100**
Paper cassette for the CP-100 printer.
- **Battery and Charge Adapter Kit BCA-CP100**
These rechargeable lithium-ion batteries and charger for the CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**
(Can also be used with the Card Photo Printer CP-10)
Allows you to power the CP-100 from your car cigarette lighter.

Card Photo Printer CP-10

Prints high-quality, credit card-size images.

- **Color Ink / Paper Set HC-36IP, HC-18IP**
- **Color Ink / Label Set HC-18IL**
- **Color Ink / Full-Sized Label Set HC-18IF**
Color ink and paper sets for the CP-10.
- **Computer Connection Kit CCK-CP100**
Connects your computer and the CP-10, allowing you to print images directly from your computer.